

TECHNICAL SPECIFICATION

ROTARY AC TRIAC RF DIMMER




- Triac dimmable and Mosfet dimmable.
- Built in 2.4GHz module, can be used as RF dimming remoter, remote control more dimming receivers.
- When direct connect dimmable light, great compatibility with a variety of dimming remoter.
- Leading edge dimming or trailing edge dimming set by dip switch.
- Minimum brightness set by dip switch.
- Rotate knob to change brightness, support push, long push operation.
- To dim and switch single color dimmable LED lamps, traditional incandescent and halogen lights.
- Can work with Wi-Fi-relay controller after install APP on IOS and Android system.



Technical data:

| Input voltage: | 100-240VAC |
|----------------------|-----------------|
| Output voltage: | 100-240VAC |
| Output current: | 1.2A |
| Output power: | 100-288W |
| Remote distance: | 30m |
| Working temperature: | -30°C~55°C |
| Product size: | L86×W86×H36.5mm |
| Net weight: | 152g |
| Catalogue number: | 99DIMMERR |

Dimensions:

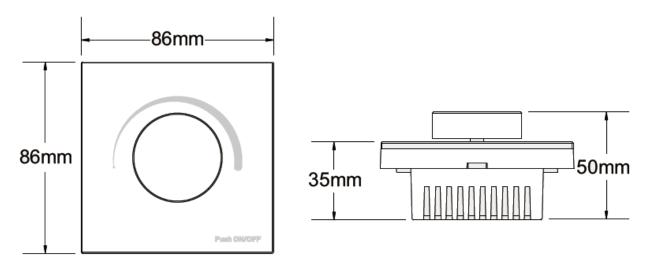

Panel controller match remoter method:

Match: Turn on light, turn off, immediately push for 5s, within 5s press any key of the remoter.

Delete: Turn on light, turn off, immediately push for 10s delete all matched remoters.





➤ How to connect AC TRIAC RF DIMMER with Wi-Fi devices

The **ROTARY AC TRIAC RF DIMMER** can work by installed iOS or Android application, via a Wi-Fi relay controller.

How to:


- 1. Turn on Wi-Fi relay controller.
- **2.** Connecting the Wi-Fi controller to **your** network.

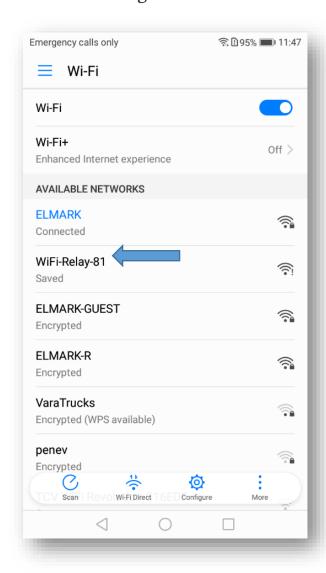

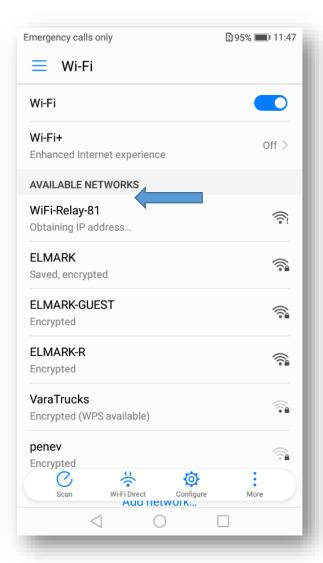




3. Start the "Skydance" app (should be already installed).

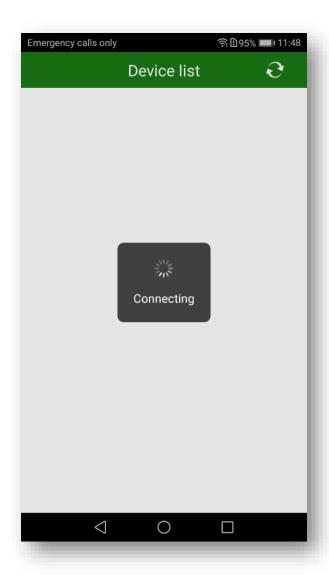


4. Connecting the Wi-Fi relay controller with the **ROTARY AC TRIAC RF DIMMER.**




4.1. Select the type of device we will command

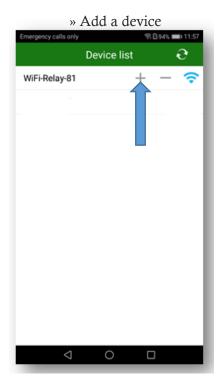



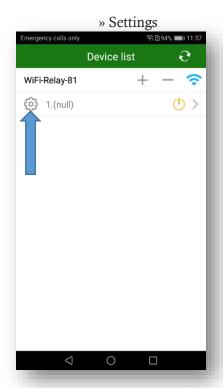


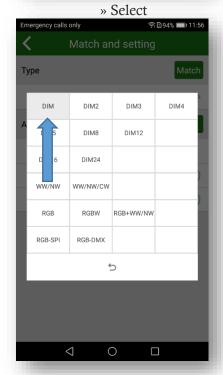



5. Long press the <u>rotary button</u> for 5s, within 5s press "Match" on your phone.

Press "Save" for finalizing the settings.

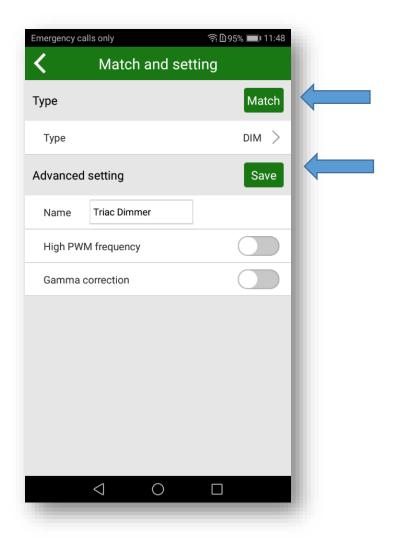


6. Your device is now connected.




FUNCTIONS:




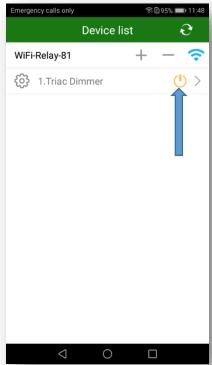


» Open the product menu

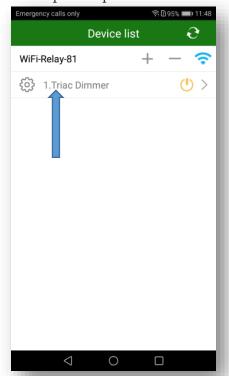

» Dimming from 0-100%

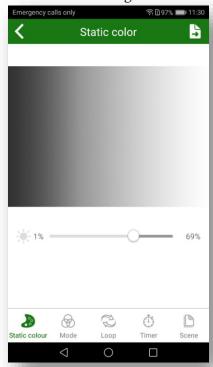


»Timer's settings

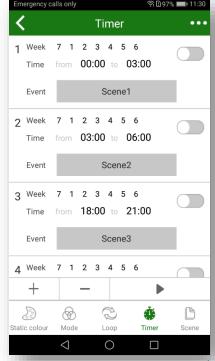

elmarkholding.eu



» Select predefined scene

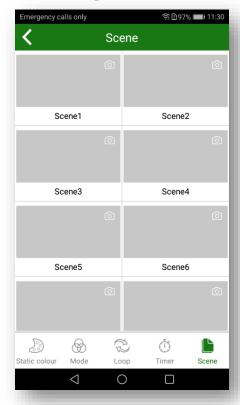

Key function:


Push: Turn on or off light.

After turn on light, rotate knob to change brightness, 2.5 turns, 50 levels.


Long push (1-5s): Fine adjust brightness.



Wiring diagram:

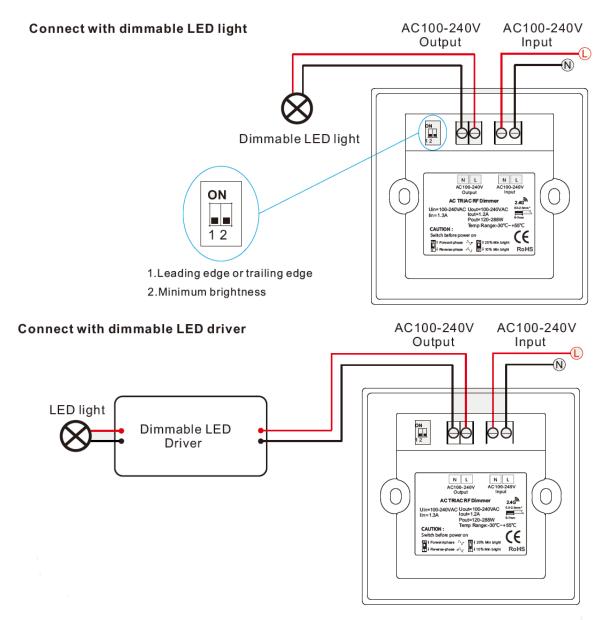

Dip switch setting

 

 Select leading edge dimmer or trailing edge dimmer according to your dimmable LED light.


Forward-phase control dimmer(TRIAC)

Reverse-phase control dimmer




Installation diagram:

- Remove the knob, then flip panel, inserted into the card edge aperture with a small screwdriver, gently pry and open the panel.

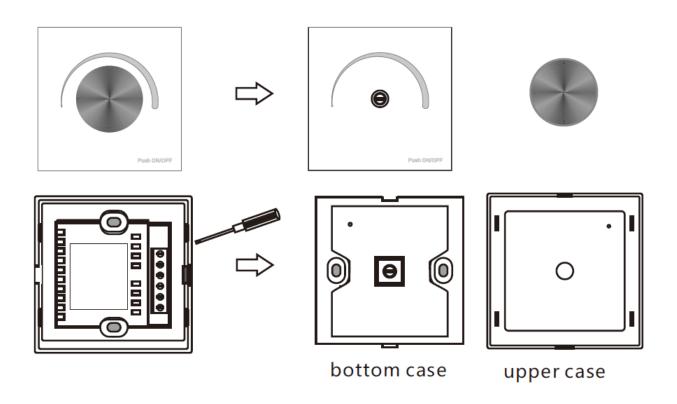


- After connect wires, put bottom case into 86 bottom box, put in the screw and tighten.

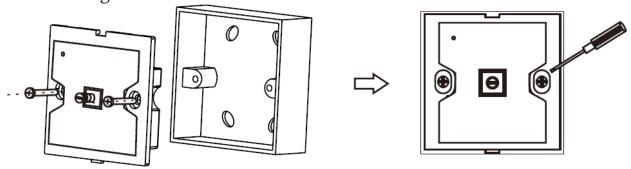



- From top to bottom, moderately cover upper case, then mount knob, complete installation.

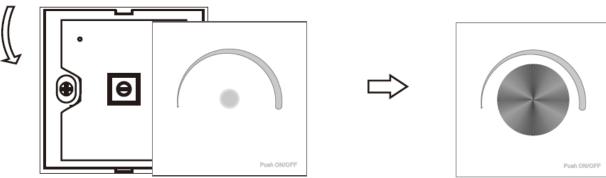

NOTES:

- In order to ensure safety, turn off the power first before wiring, ensure correct wiring to avoid short circuit.
- In the process of installation, don't push the knob hardly, so as not to loose knob spindle and scratch panel.