

# EL<sup>®</sup>MARK

The Brand of Electricity

## Wi-Fi SMART CAMERAS



Catalogue number	Model	Resolution	Power supply	Speaker
195067	EL-2019Y	1280×720(1.0MP)	100-240VAC / 5V, 1A	8Ω 1W



Catalogue number	Model	Resolution	Power supply	Speaker
195068	EL-2017G	1920×1080(2.0MP)	100-240VAC / 5V, 2A	8Ω 1W



Catalogue number	Model	Resolution	Power supply	Speaker
195070	EL-2019Q	1920x1080 (2MP)	100-240VAC / 5V, 1A	built-in 18 euro 1W

## USER MANUAL

### KIT INCLUDES:

- Camera - 1 piece
- Power supply: 1 piece
- Cable: 1 piece
- Mounting screws - 1 set
- Wall holder: 1 piece
- Camera reset needle: 1 piece
- User manual: 1 piece

### FUNCTIONS:



#### Wireless Wi-Fi connection to the camera

This connection allows you to access the camera from all over the world without having to connect the cable to the Internet.



#### Two-Way Talk Audio

You can hear what is being said in the room where the camera is installed, as well as talk and be heard through it.



#### Night vision mode

Activated in low light.



#### HD quality

High definition video.



#### Motion Detection

The camera sends a notification to your phone when it detects movement in the room. Ability to adjust the time and specific sector of the screen.



#### Pan/Tilt control

See more of your spaces with smooth 340° Pan & 110° Tilt control.



#### Storage


Supports TF cards up to 64GB (not included)  
Cloud storage - Cloud storage - 1 month free trial.

### OPERATION GUIDE:

- Plug the IP Camera into a power outlet.



- Camera shall pan and tilt one circle around 30 seconds after power on.
- Press the camera's restart button for about 3 seconds. Use the needle in the kit for this purpose.

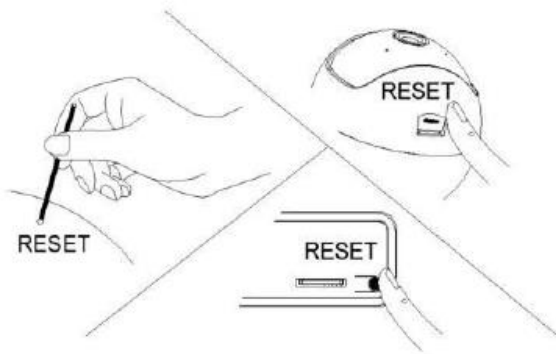

- Charging is complete when the camera indicator starts flashing red and you hear a beep.



### 1. Registration/login



1. Download the "IPC360" app: for Android from the Google Play Store and for iOS from the Apple App Store.


**Note:** \* To successfully configure the new device you need to activate the location of the phone, deactivate mobile data during setup, activate all the permissions that the phone asks for when installing the application.

**\*\*** In case of unsuccessful setup attempt for some reason, before trying to configure the device again - be sure to restart it from the button.


2. Connect the camera to a Wi-Fi network and make sure your smartphone is also connected to Wi-Fi.

**Note:** The camera does not support 5G frequency


3. After installing the application, you need to register. Registration is done via the Sign Up button

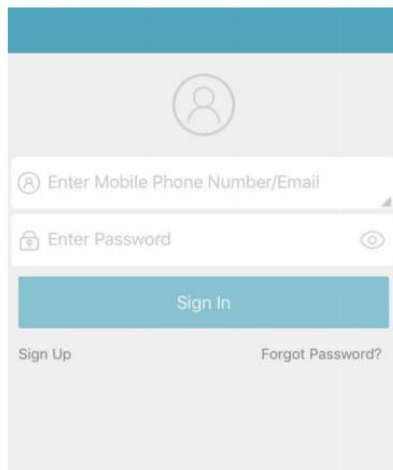

4. Select a country and use your email address to register.

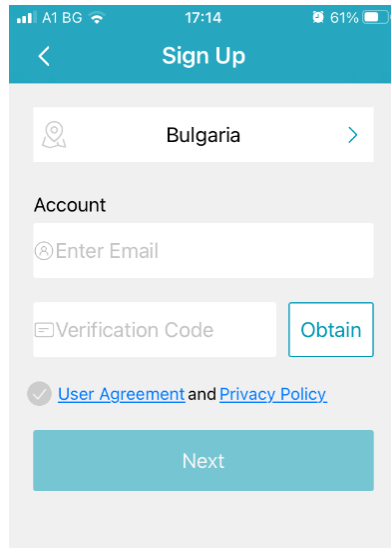

5. Touch the "Obtain" button to receive a verification code for your email address and enter it in the "Verification Code" field to complete the registration.

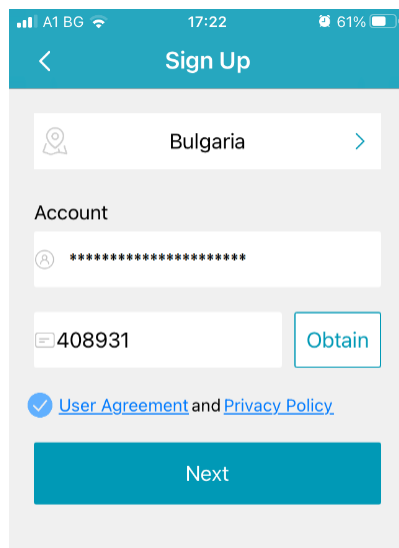


6. Create your new password.

**Note:** The password must be at least 6 characters long and must not exceed 18 characters.  
password cannot include special characters such as % # \$ @ \_ + and a blank field.



## 2. Add a camera by wireless mode:

Before adding a camera, make sure your phone's sound is turned on and turn up to the maximum.

1. Touch "+" to add a camera.

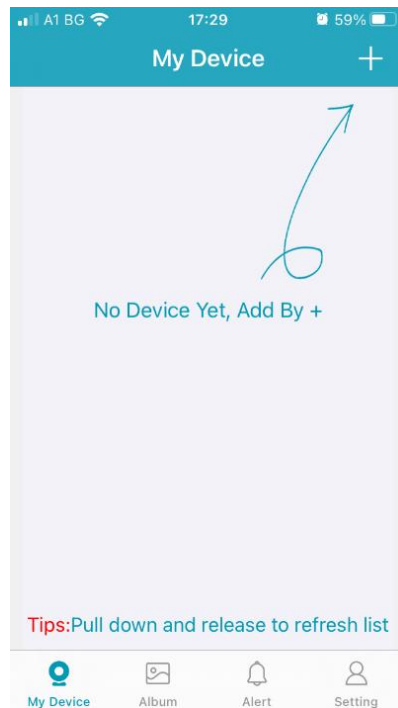


2. Select "Camera", then "Smart wireless mode".

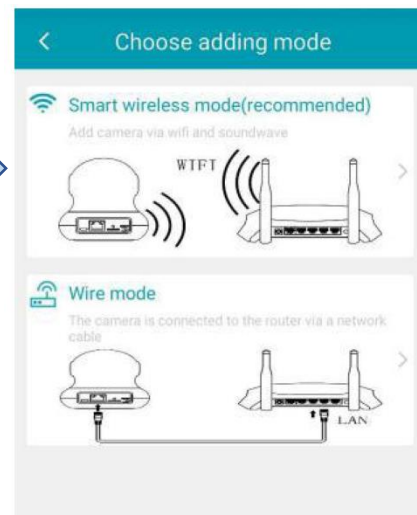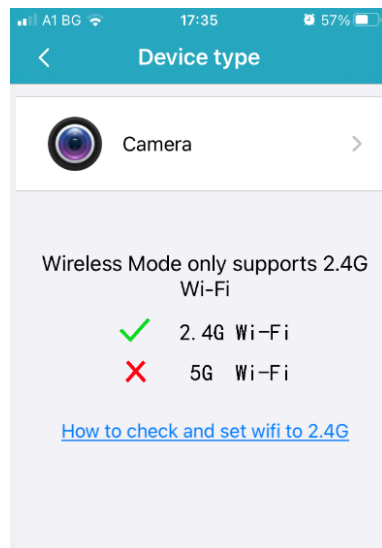


# USER MANUAL

## WI-FI CAMERAS


3. Click "Next" when you hear the beep

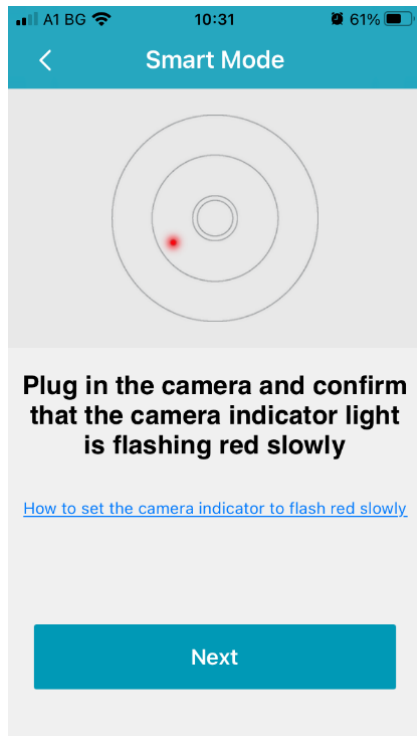

4. Enter the Wi-Fi password you will use

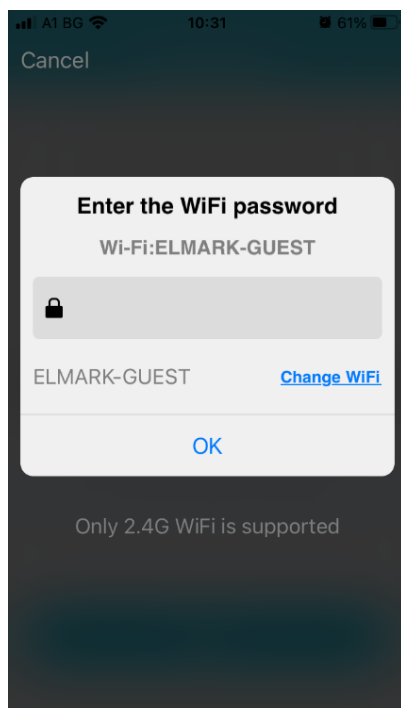


5. Wait a few seconds to hear "Camera ready" and enter a device name in the waiting window. You can choose from the list of offers (Bedroom, Living room, etc.) or enter a name of your choice.

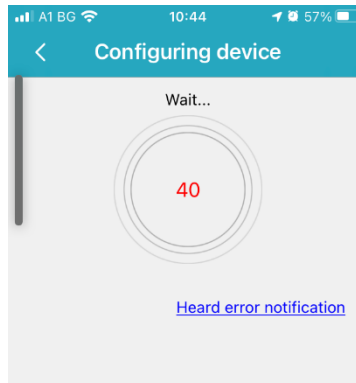


6. Camera added successfully.

### 3. App illustration:

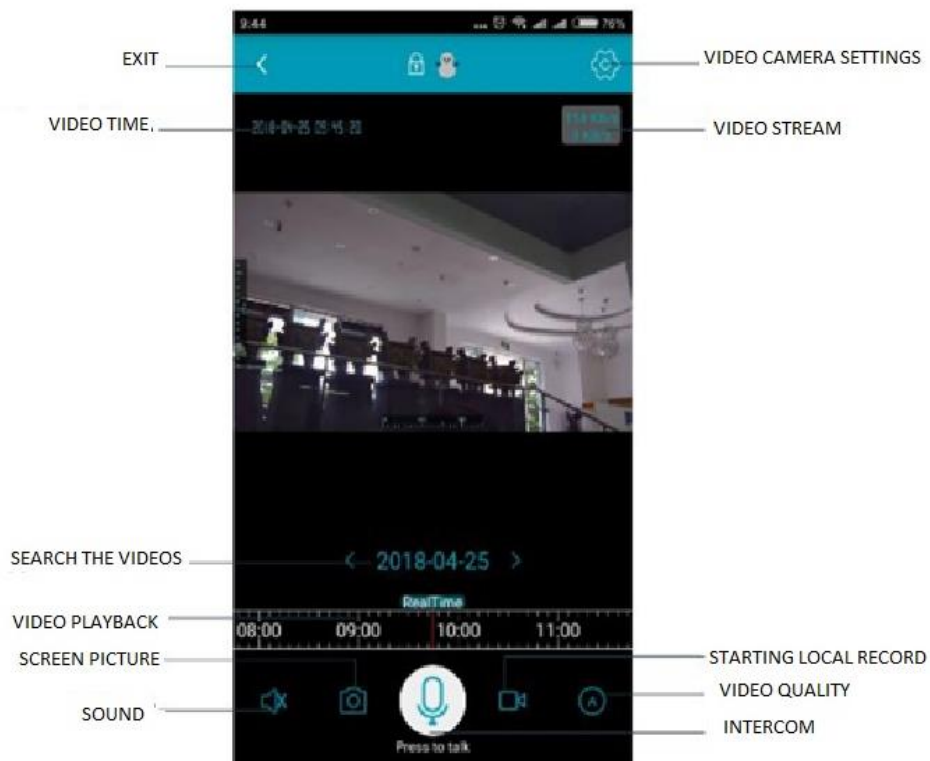



### 4. Camera settings:

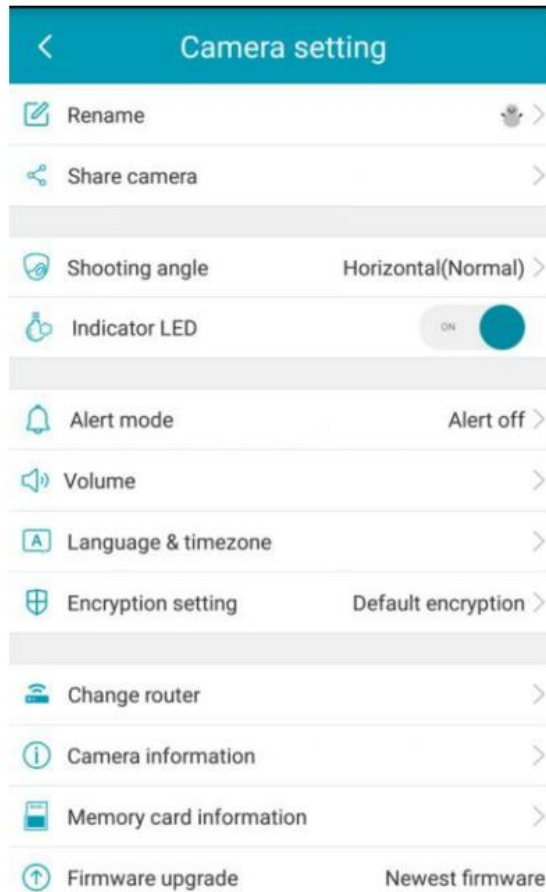

**Rename:** Change the camera name.

**Share camera:** Share the camera with up to 5 other registered accounts.

**Shooting angle:** adjusting the shooting angle.

**Indicator LED:** Select to turn on / off the LED indicator.

**Alert mode:** An SD card must be inserted to set it up.

**Volume:** Adjust the volume of the intercom, camera and microphone.

**Languages & time zone:** Select the time zone of the camera. The language is synchronized with the mobile phone settings.

**Encryption settings:** Set your encryption mode.

**Change router:** Restart the camera if you need to change the router and then add again.

**Camera information:** Detailed information about the added camera.

**Memory card information:** Check and format the inserted SD card.